

NEW SOUTH WALES GOVERNMENT RAILWAYS


'FP' PAY BUS

CONSTRUCTION HINTS


1. Wash all components to remove release agent.
2. Trim around all windows, doors and wheel arches to remove all flash.
3. Dry fit front and rear windscreens with body, when satisfied with fit fasten with super glue.

CHASSIS



1. Clean flash from chassis.
2. Take wheel assemblies and fit into slots on chassis, using a very small drop of super glue secure bearing in recess as per sketch.

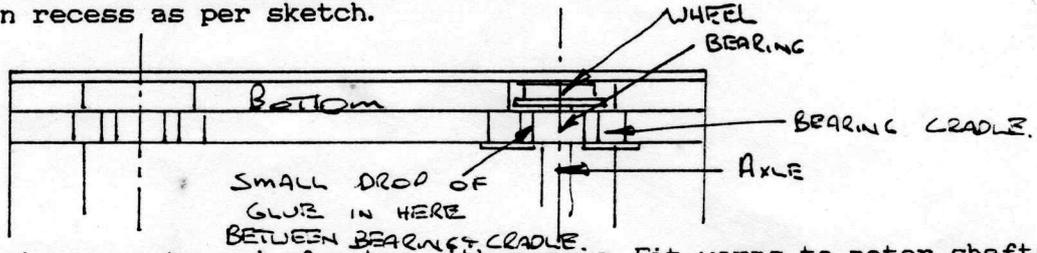

3. Take round plate and secure to end of motor with screws. Fit worms to motor shafts leaving a 4mm space between end of motor and worm, and a small amount of backlash, as per sketch.

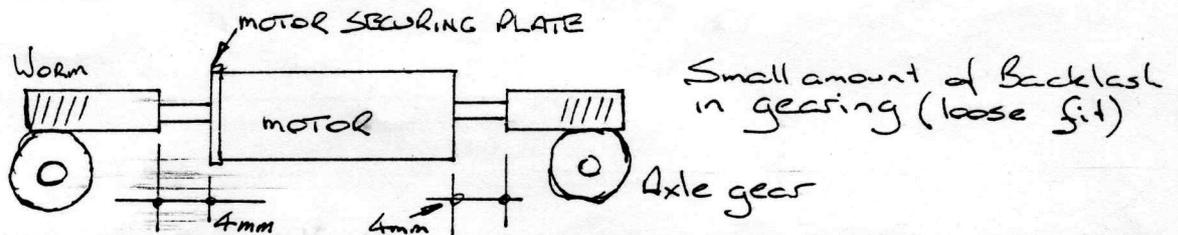

4. Check meshing of worm with gear on axle and secure motor to chassis, locating arrow on motor mount and chassis mount together. Secure with super glue.
5. Fix pick ups (as per sketch) with super glue, fit chassis to inside of body (Chassis may require trimming).

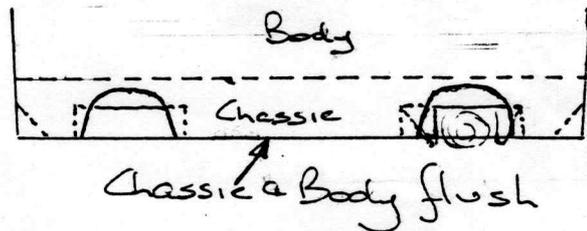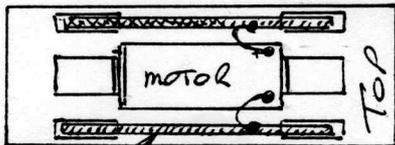

PAINING AND DETAILING

1. Fit bumper bars to end of cab, drill holes for handrails at doorways and fit.
2. Take sideframes and fit into wheel arches (trimming may be required), with torsion bar to the centre of the car. When satisfied that they look ok fasten with super glue.
3. Paint Deep indian red with white roof - add chrome yellow lines.

NUMBERS

FP7 - FP13

HAPPY MODELLING.