

FAR NORTH HOBBIES

STATE RAIL AUTHORITY

"P.H.V." POWER VAN.

CONSTRUCTION HINTS

1. Clean flash off all components where required, use Super Glue for construction.

BODY

1. Dry fit ends to inside edges of sides.

(* NOTE end thickness may have to be trimmed to allow sides to fit snugly-around windows.)


Glue ends to sides aligning roof line-

2. Drill and tap 8BA hole for bogie and coupling.

3. Fit chassis to body.

* Making sure it's around the right way

4. Drill .020 holes in buffer and headstock-cut wire 5mm long and secure-as per sketch. Trim wire and smooth with a file.

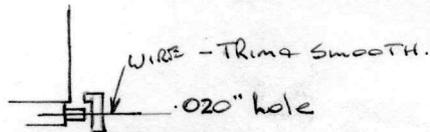

5. Drill hand brake brackets for brake wheels and release lever- from one side drill through centre chassis and fit

6. Fit fuel tanks to allotted places.


7. Fit roof and secure - ensuring E/R vent is at Engine Room End

8. Drill holes for ventilators and fit.

NOTE: Torpedo vents on engine hatches.

Fit foot walks one each side of engine hatch, one small, one large each side

9. Cut tubing to fit around doors on car ends as per sketch-

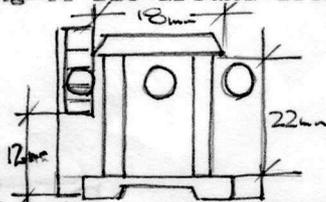

Fit ladder-

10. Drill holes for hand rails and fit.

PAINT

1. Vehicles were painted in "Candy" colour.

Roof-Silver. Chassis-Grimy Black.

2. Clean film off windows when painting is completed.

3. Numbers- 2401-2404.

"HAPPY MODELLING"